

GP Quick Change Tool GEN 5

Remove drive belt, use clutch tool holder and remove clutch bolt. Position GP tool over pdrive clutch cover with provided bolt, (you will need a 22mm or 7/8" socket) make sure to position tool on moveable shieve to allow enough clearance to remove ramp assy or needle bearing roller pin.

Use tool holder to hold clutch and tighten bolt until tool rests up against clutch cover.

After ramp or roller re-installation, remove tool, and re install clutch bolt.

Torque bolt to BRP recommended spec of 89ftlbs. Reinstall drive belt.

